



Catalogue

I.Product introduction

II.Product exterior

III.Technical parameter

IV.Operation instruction

1. Power on/off
2. Number register
3. Deleting calling numbers
4. Prompt mode
5. Display time setting
6. Deleting registered numbers
7. Initialization
8. Time setting
9. Display mode
10. Digit number display
11. Function setting
12. Key register mode setting
13. Language setting
14. Password setting
15. Data downloading function
16. Alias downloading function
17. Alias display

V.Attention

VI.FAQ

1

I.Product introduction

This product is a new generation of English message mobile receiver, can be used with all SINGCALL pagers, can receive calling information independently, supporting the user-defined message, can register and download data through serial port, including Chinese, English and digits.


Main characteristics:

1. Big color OLED screen, kinds of font colors, self-luminous, wide visual angle.
2. With fast delete function, it can delete the single information by one button.
3. With matched software, users can define the showing information and advertisement information.
4. Downloading the registration through serial port, making registration easier.

2

II.Product exterior

5. Rechargeable design, avoiding the trouble of changing batteries frequently, long stand-by time (about 7 days).
6. With encryption function, avoiding information lost by mistake operation.

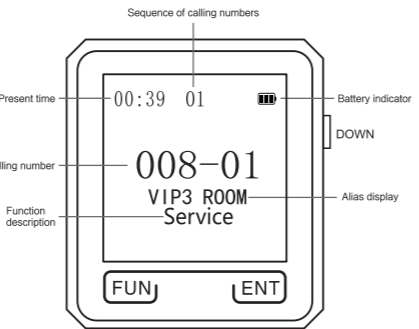

3

III.Technical parameter:

- ◆ Screen: Color OLED
- ◆ Display resolution: 128*128
- ◆ Digit number display: a group of 3-5 digits adjusted
- ◆ Number of display: 10 scrolling
- ◆ Frequency band: 433.92MHz
- ◆ Battery: 3.7V lithium battery
- ◆ Battery volume: 320mAh
- ◆ Stand-by time: 7 days
- ◆ Receiver sensibility: -114dbm
- ◆ Function keys: Two touching keys + one soft press key
- ◆ Key life: Million times
- ◆ Work temperature: 32-122°F (0-50°C)
- ◆ Number deleting mode: manually, automatically
- ◆ Pager capability: 399
- ◆ Prompt mode: vibration, beep, vibration and beep.
- ◆ Calling number display: all positions can be set with English letter or digit(0-9, A-Z)
- ◆ Alias display: English letter, digit or Chinese

4

IV.Operation instruction

- a. Please charge the portable receiver before first using (charge method please check page 18). Turning off the power after charging is finished, press and hold [DOWN] for 5 seconds, enter into standby mode. (Time mode).
- b. Standby mode, screen power off in 5 seconds automatically, through key [DOWN] to turn on screen, key [FUN] and [ENT] can be used only while screen is lighted.
- c. Before registration, please make sure the default number display mode, display digit number, function display and key register mode of this product are the same with what you want, if not, please change according to the instruction manual firstly.
- d. When you cannot enter into function setting please check page 16 'Password setting' to confirm whether is encryption, after decryption to do function setting.

5

1. Power on/off

- 1) Power on: Power off mode, press and hold key [DOWN] for 5 seconds until screen lighten, power is on.
- 2) Power off/sleep mode: (power off: clock time is not reserve and clock time to zero after power on. sleep mode: clock time is reserve and clock time not to zero after power on.)
 - A. Standby mode, press and hold key [DOWN] for 3 seconds to enter into select interface 'Power off/Sleep mode', power is off.
 - B. Short press key [FUN] to switch 'Power off/Sleep mode'
 - C. Press and hold key [ENT] for 2 seconds to enter into select interface 'Power off/Sleep mode'. Standby mode, press and hold key [DOWN] for 3 seconds to enter into select interface 'Power off/Sleep mode', press and hold key [DOWN] for 3 seconds to exit select

6

2. Number register

- 1) Standby mode, press and hold key [FUN], until 'Register' shows on the screen.
- 2) Press and hold [FUN] until the number 001/0001/00001/001-01/0001-01/00001-01 appears (the default is 001), press [ENT] and [DOWN] to change the blinked number, press [FUN] to move the cursor to choose the position of numbers (each position can set from 0-9, A-Z).
- 3) After getting the number wanted, press down the call pager, the receiver beeps with the registered number flashing on the screen, the registration is finished. (If the registered number is wrong while registration, press and hold key [DOWN] 2 seconds, the number flashed mean deletion is finished, do the registration again. If the number did not flash mean the number has not been registered.)

7

3. Deleting calling numbers

- 4) To register more than one pager, please repeat the step 3) after the first one finished.
 - 5) After finishing the all numbers, keep press [FUN] till 'Register' shows on the screen.
 - 6) Press and hold [ENT] till back to standby mode. The registration is done.
- ※**Special instructions:**
Can register 399 numbers at most
During the registration, the number does not blink or receiver not beep that means the number is not registered successfully, then you can judge the problems according to the digits behind the calling number:
1- Means this number is not registered, but this pager is registered to another number.
2- Means this number has been registered by the other pager, but not this one.
3- Means the pager and number are both registered.
4- Means the number capacity has got the limitation of 399.
No digit means the receiver did not get the

8

4. Prompt mode

- 1) Standby mode, press and hold [FUN] till 'Register' appears.
- 2) Press and hold [ENT] till 'Prompt' appears.
- 3) Press and hold key [FUN] till 'Vibrate 1' appears on the screen, by [ENT] to choose among 'Beep', 'Vibrate & Beep', 'Vibrate 1', 'Vibrate 2', 'Vibrate 3', 'Vibrate 4' (The number behind 'Vibrate' is bigger means the vibration prompt time is longer).
- 4) Press and hold [FUN] till 'Prompt' appears again.
- 5) Press and hold [ENT] till back to standby

9

5. Display time setting

- 1) Standby mode, press and hold key [FUN] till 'Register' appears.
- 2) Press key [ENT] till 'Display Time' appears.
- 3) Press and hold [FUN], till a number between 01 and 99 appears. Press [ENT] and [DOWN] to change the blinked number, press [FUN] to change the cursor position, the number 01-99 means the time is 01-99 seconds, 00 means unlimited display.
- 4) Press and hold [FUN] till 'Display Time' appears.
- 5) Press and hold [ENT] till back to standby mode. The display time setting is done.

10

SINGCALL®

Eastway International (HK) Limited

www.singcall.com

FCC declaration of conformity: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



4) Press [DOWN] repeatedly to choose the number to be deleted, press and hold [ENT] to delete it. And the next registered number appears on screen after the deleting.
5) Press and hold [FUN] till 'Delete' appears.
6) Press and hold [ENT] till back to standby mode. Deleting is done.

7. Initialization

1) Standby mode, press and hold [FUN] till 'Register' appears.
2) Press [ENT] till 'Initialize' appears.
3) Press and hold [FUN] till 000 appears, and press key [ENT] 3 seconds to start the initialization. The LED screen shows '—'. When '000' appears again, the initialization is done.
4) Press and hold [FUN] till 'Initialize' appears.
5) Press and hold [ENT] till back to standby mode (time mode). The initialization is done.

8. Time setting

1) Standby mode, press and hold [FUN] till 'Register' appears.

11

2) Press [ENT] till 'Time' appears.
3) Press and hold [FUN]. The current time, for example 08:10 appears.
4) Press [ENT] and [DOWN] to regulate the time, press [FUN] to choose the hour and minute.
5) After time setting, press and hold [FUN] till 'Time' appears.
6) Press and hold [ENT] till back to standby mode. Time setting is done.

※**Time will return to zero if the battery used out or turn off the power, need resetting.**

9. Display mode

1) Standby mode, press and hold [FUN] till 'Register' appears.
2) Press [ENT] till 'Mode' appears.
3) Press and hold [FUN] till 'XXX' or 'XXX-XX' appears (the default mode is XXX)
Press [ENT] can switch XXX or XXX-XX.
4) Press and hold [FUN] till 'Mode' appears.

12

5) Press and hold [ENT] to back to standby mode. Display mode setting is done.

10. Digit number display

1) Standby mode, press and hold [FUN] till 'Register' appears.
2) Press [ENT] till 'Digit' appears.
3) Press and hold [FUN] till a number from 'Three' to 'Five' appears (the default number is 'Three').

'Three' means the digit number displayed is 3, as XXX/XXX-XX

'Four' means the digit number displayed is 4, as XXXX/XXXX-XX

'Five' means the digit number displayed is 5, as XXXXX/XXXXX-XX

Press [ENT] to choose the number 'Three', 'Four' and 'Five'.

4) Press and hold [FUN] till 'Digit' appears.

5) Press and hold [ENT] till back to standby mode. Digit number display setting is done.

13

11. Function setting

1) Standby mode, press and hold [FUN] till 'Register' appears.

2) Press [ENT] till 'Function' appears.

3) Press and hold [FUN] till 'On' appears (the default state is 'On'). Press [ENT] to switch 'On' or 'Off'

'On' means there is the function name under the calling number (For example Order, Water, Service, Bill, Cancel or other user-define content).

'Off' means there is no function name under the calling number.

4) Press and hold [FUN] till 'Function' appears.

5) Press and hold [ENT] till back to standby mode. Function setting is done.

5) Press and hold [ENT] till back to standby mode. Function setting is done.

5) Press and hold [ENT] till back to standby mode. Function setting is done.

5) Press and hold [ENT] till back to standby mode. Function setting is done.

5) Press and hold [ENT] till back to standby mode. Function setting is done.

14

12. Key register mode setting

1) Standby mode, press and hold [FUN] till 'Register' appears.

2) Press [ENT] till 'Function' appears.

3) Press and hold [FUN] till 'On' appears (the default state is 'On'). Press [ENT] to switch 'On' or 'Off'

'On' means there is the function name under the calling number (For example Order, Water, Service, Bill, Cancel or other user-define content).

'Off' means there is no function name under the calling number.

4) Press and hold [FUN] till 'Function' appears.

5) Press and hold [ENT] till back to standby mode. Function setting is done.

5) Press and hold [ENT] till back to standby mode. Function setting is done.

5) Press and hold [ENT] till back to standby mode. Function setting is done.

5) Press and hold [ENT] till back to standby mode. Function setting is done.

5) Press and hold [ENT] till back to standby mode. Function setting is done.

15

13. Language setting

2) Press [ENT] till 'Key' appears.

3) Press and hold [FUN] till 'Multi-key' appears (the default state is 'Multi-key'). Press [ENT] to switch 'Multi-key' or 'Single-key'.

'Single-key' means single pager mode, mainly used for single key pager, if used with multi-key pagers, then each key need to register different numbers.

'Multi-key' means common mode, mainly used for multi-key pagers. The tail number represents the specific function. If without user-defined, the default function tail number 01 means Order, 02 means Water, 06 means call for Service, 08 means Bill and 03 means cancel the calling; if used with single-key pager, then the tail number keeps 06 always.

4) Press and hold [FUN] till 'Key' appears.

5) Press and hold [ENT] till back to standby mode. Key register mode setting is done.

5) Press and hold [ENT] till back to standby mode. Key register mode setting is done.

5) Press and hold [ENT] till back to standby mode. Key register mode setting is done.

5) Press and hold [ENT] till back to standby mode. Key register mode setting is done.

5) Press and hold [ENT] till back to standby mode. Key register mode setting is done.

5) Press and hold [ENT] till back to standby mode. Key register mode setting is done.

16

14. Password setting

1) Standby mode, press and hold [FUN] till 'Register' appears.

2) Press [ENT] till 'Language' appears.

3) Press and hold [FUN] till 'English' appears on screen. Press [ENT] to switch 'English' or '中文'.

4) Press and hold [FUN] till 'Language' appears.

5) Press and hold [ENT] till back to standby mode. Language setting is done.

5) Press and hold [ENT] till back to standby mode. Language setting is done.

5) Press and hold [ENT] till back to standby mode. Language setting is done.

5) Press and hold [ENT] till back to standby mode. Language setting is done.

5) Press and hold [ENT] till back to standby mode. Language setting is done.

5) Press and hold [ENT] till back to standby mode. Language setting is done.

5) Press and hold [ENT] till back to standby mode. Language setting is done.

17

15. Data downloading function

Please check user manual of data download software.

5) Press and hold [FUN] till 'Password' appears.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

18

16. Alias downloading function

Please check user manual of data download software.

5) Press and hold [FUN] till 'Password' appears.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

6) Press and hold [ENT] till back to standby mode. Password setting is done.

19

17. Alias display

1) Standby mode, press and hold [FUN] till 'Register' appears.

2) Press [ENT] till 'Alias display' appears.

3) Press and hold [FUN] till 'Off' appears (the default state is 'Off'). Press [ENT] to switch 'On' or 'Off'.

'Off' means there is no alias user-define content under the calling number.

'On' means there is alias user-define content under the calling number.

4) Press and hold [FUN] till 'Alias display' appears.

5) Press and hold [ENT] till back to standby mode. Alias display setting is done.

5) Press and hold [ENT] till back to standby mode. Alias display setting is done.

5) Press and hold [ENT] till back to standby mode. Alias display setting is done.

5) Press and hold [ENT] till back to standby mode. Alias display setting is done.

5) Press and hold [ENT] till back to standby mode. Alias display setting is done.

20

Register
001 **3**

3.Question: Press [DOWN] key, the watch doesn't display anything.

Cause: The power turns off.

Answer: Press and hold [DOWN] key for 5 seconds, power is on. Or charge the watch.

Answer: Press and hold [DOWN] key for 5 seconds, power is on. Or charge the watch.

Answer: Press and hold [DOWN] key for 5 seconds, power is on. Or charge the watch.

Answer: Press and hold [DOWN] key for 5 seconds, power is on. Or charge the watch.

• If you find any unusual problems, please consult our after-sale staff immediately. Do not dismantle the products by yourself to cause the unnecessary troubles.

VI.FAQ

1.Question: Only the "Time", "Language" function can be set.

Cause: The watch is encrypted.

Answer: Refer to page 16 "Password setting" to decrypt.

2.Question: Press down the call pager after registration, the watch doesn't work.

Cause: The pager is registered unsuccessfully.

Answer: Refer to page 7 "Number register". Or you can watch the registering video.

Video web address: v.singcall.com

Attention: During the registration, the number does not

During the registration, the number does not