

## ◆ User Manual for SC-R16 ◆

---

### **1. Registration:**

A. Keep pressing the key 'Register' four seconds until the left indicator light is on, then let go. Press the call pager that needs to be registered. If the register indicator blinks, it means the registration is done.

※ Special notes: If the call pager had been registered already, the register indicator light won't blink. Ten pager can be registered at most.

B. Keep pressing the key 'Register' four seconds until the left indicator light is off. It means the registration is exited.

### **2. Calling:**

Standby mode, pressing the registered pager, the indicator blinks with beep prompting (alarm sound). The alarm time is 15 seconds.

※ Special notes: During alarm time, press key 'Register/Cancel' can cancel alarm sound manually.

### **3. Initialization:**

Do this step will delete all the pagers you have registered. Keep pressing the key 'Initialize' four seconds and the left indicator light is on. When the indicator light is off, the initialization is finished.